



VAUXHALL CORSA 1.0T ACTUATOR FITTING INSTRUCTIONS FMACVC1


Please thoroughly read through and familiarize yourself with these instructions in their entirety prior to beginning any part of the installation process of any component. Please also ensure the vehicle and engine has cooled down sufficiently to avoid risking possible skin burns or other injury.

TOOLS NEEDED:


10mm socket drive or spanner

7.5mm drill bit and drill


1. Using a 10mm socket drive or spanner remove the turbo heat shield and actuator.

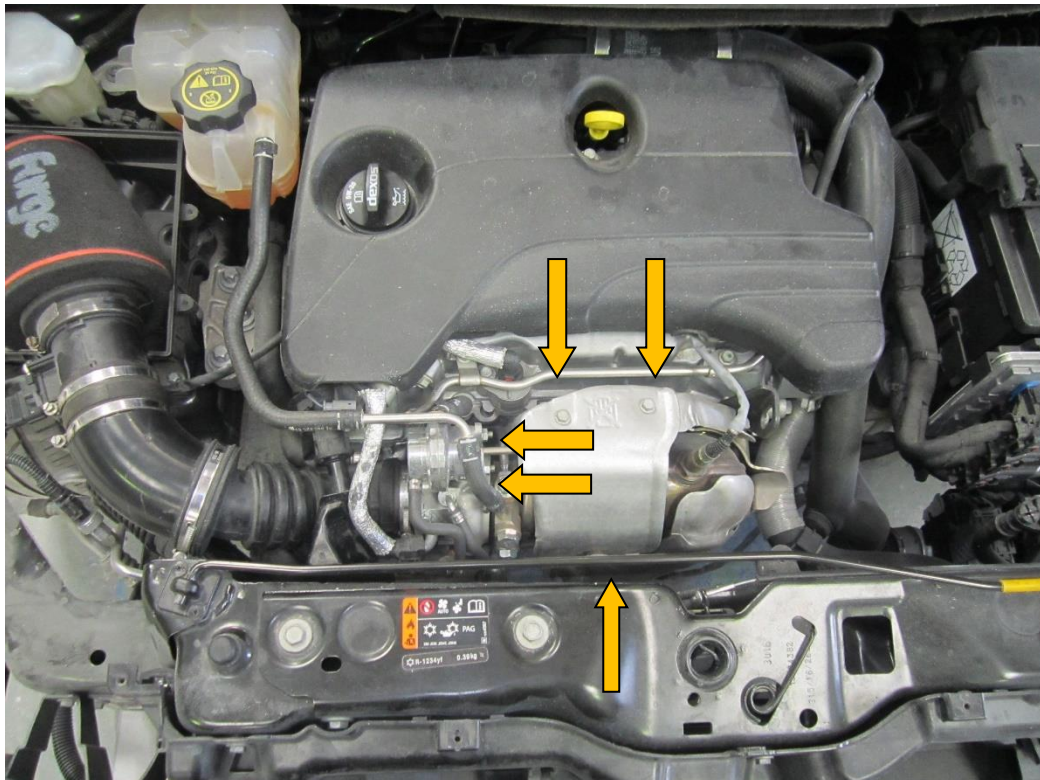

2. Remove the turnbuckle from the oem actuator and transfer it to the Forge Motorsport actuator without fully tightening the lock nut.

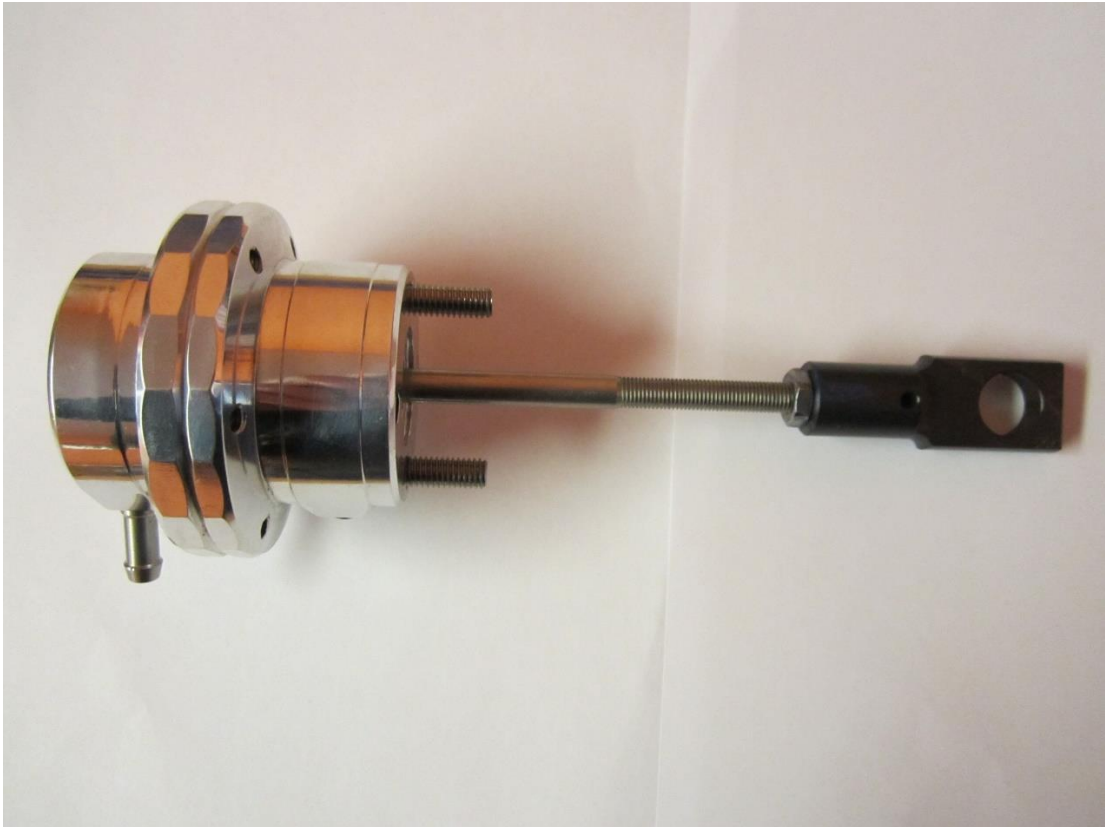

3. The actuator bracket holes on the turbo must be drilled out to 7.5mm.

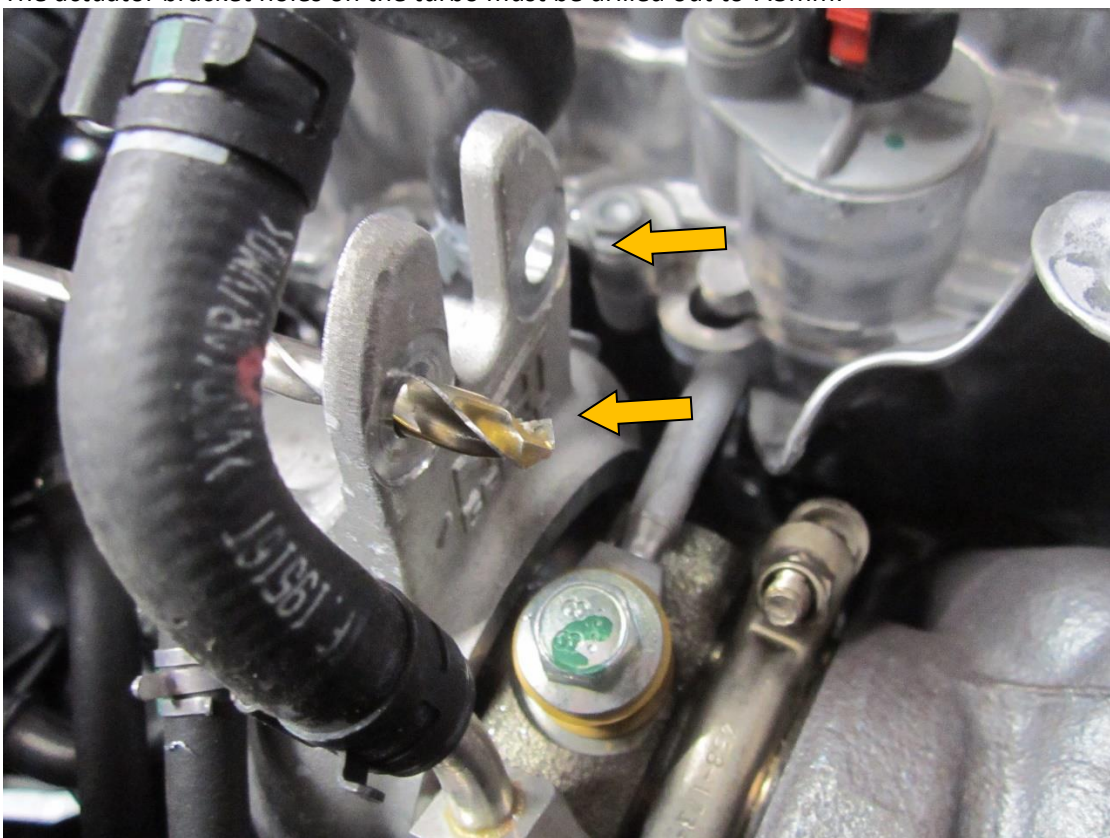

4. Install the Forge Motorsport actuator, when connecting the turnbuckle ensure the length is adjusted to keep the wastegate shut, a pre-tension on the acuator should be set between 2 and 3 rotations this is to ensure the wastegate stays shut under boost from the turbo .

5. Reverse step 1 to complete the installation.

Check out WWW.FORGEMOTORSPORT.CO.UK and
WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.com



www.facebook.com/forgemotorsport



[@forgemotorsport](https://twitter.com/forgemotorsport)



[@forgemotorsport](https://www.instagram.com/forgemotorsport)

Engineered for performance

