



SKODA FABIA 1.2TSI 2015-ON


BOOST TAP FITTING KIT




TOOLS NEEDED:

POSI DRIVE SCREWDRIVER


1. The boost tap block must be fitted beneath your map sensor which is located on the inlet manifold. Pry the clips apart while pulling the sensor in an upward motion to remove .

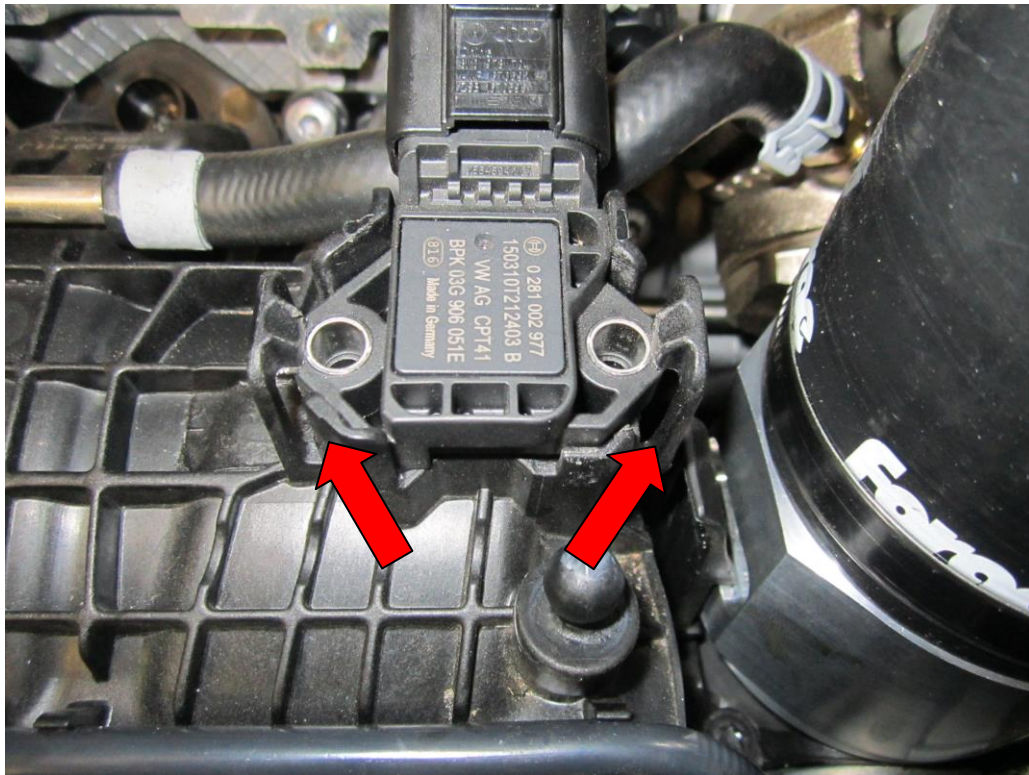

2. The boost tap block must now be placed in position on the manifold, make sure the cork gasket is placed beneath the boost tap block then push down again until you feel it click into position

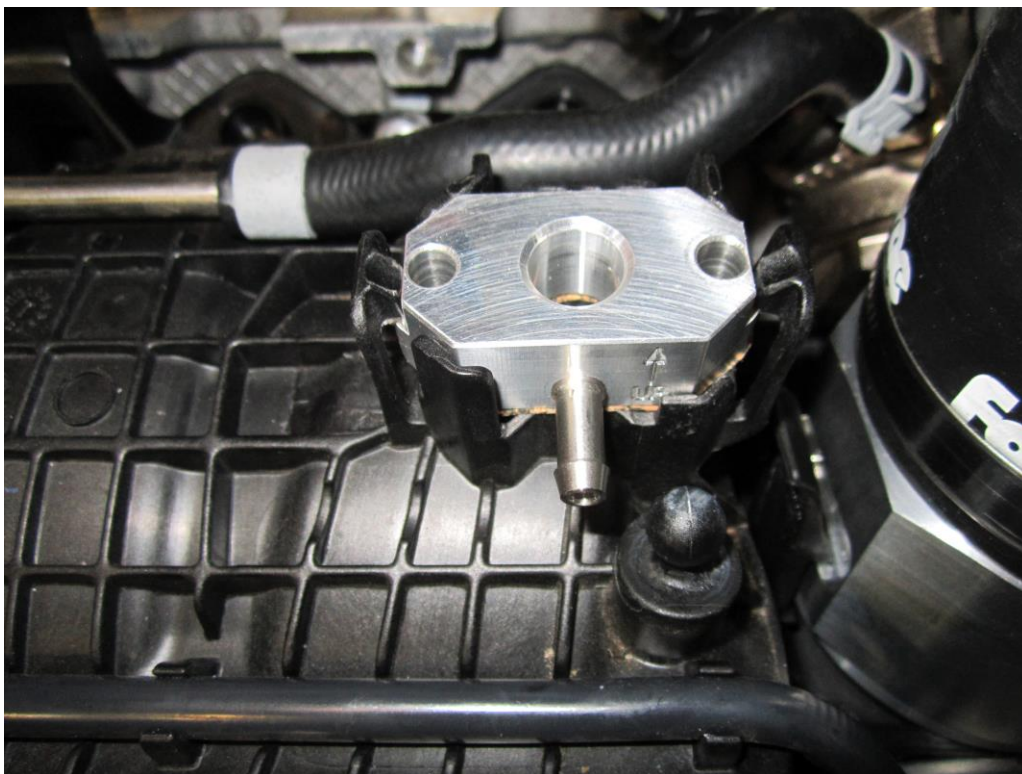

3. Now fit the sensor to the boost tap block using the posi screws provided and tighten with a posi drive screwdriver.

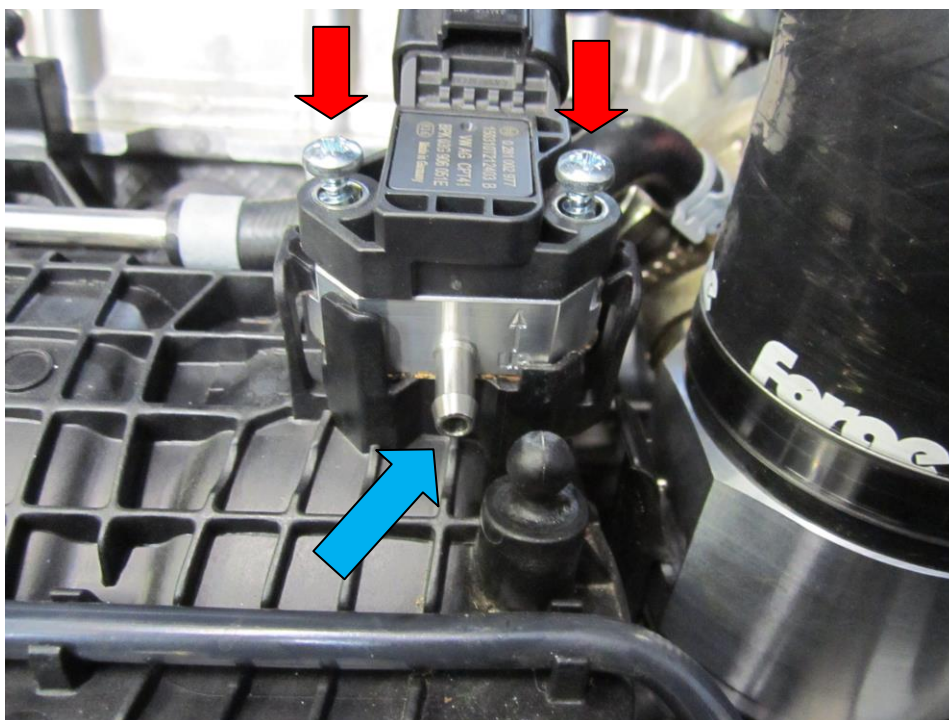

4. Now fit the vacuum pipe to the nipple arrowed blue in the picture above and route to the required location .

Check out WWW.FORGEMOTORSPORT.CO.UK and
WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.com



ENGINEERED FOR PERFORMANCE