



SKODA FABIA 1.2 TSI 2015 – ON INDUCTION KIT FITTING INSTRUCTIONS



TOOLS NEEDED:

Hose clamp driver


Posi drive screwdriver

Hose clamp plier removal tool


1. Using hose clamp pliers, remove the clamp that connects the cold air feed to the airbox and also the inlet hose to the turbo as pictured below.



2. Now remove the inlet hose from its position by pushing down on the retaining clips as pictured below.

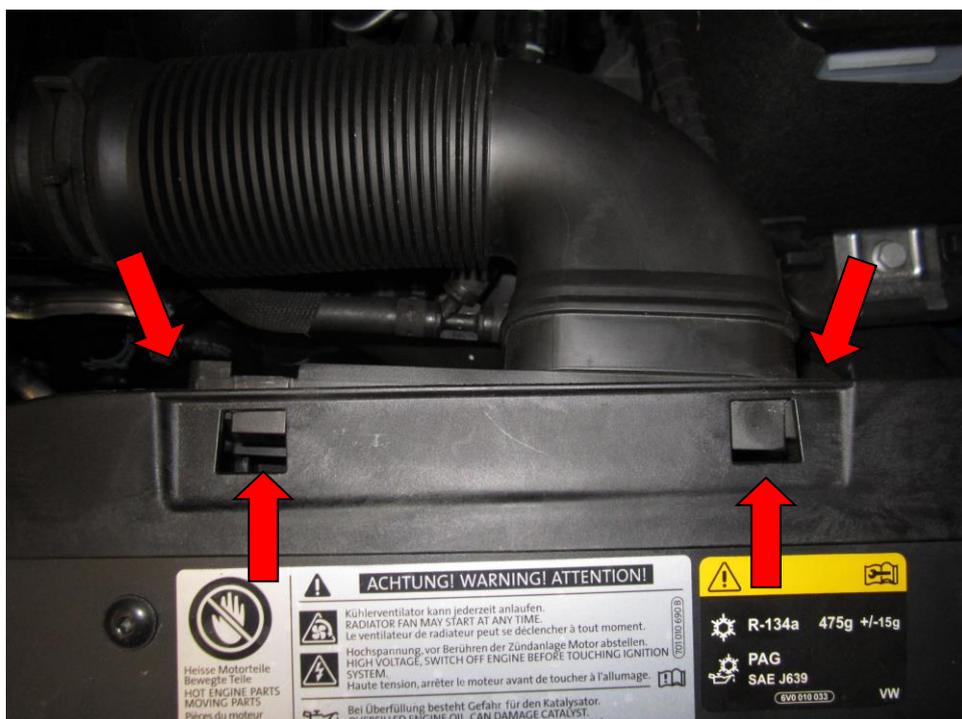

3. Remove the pipe from the airbox to the cam cover breather.

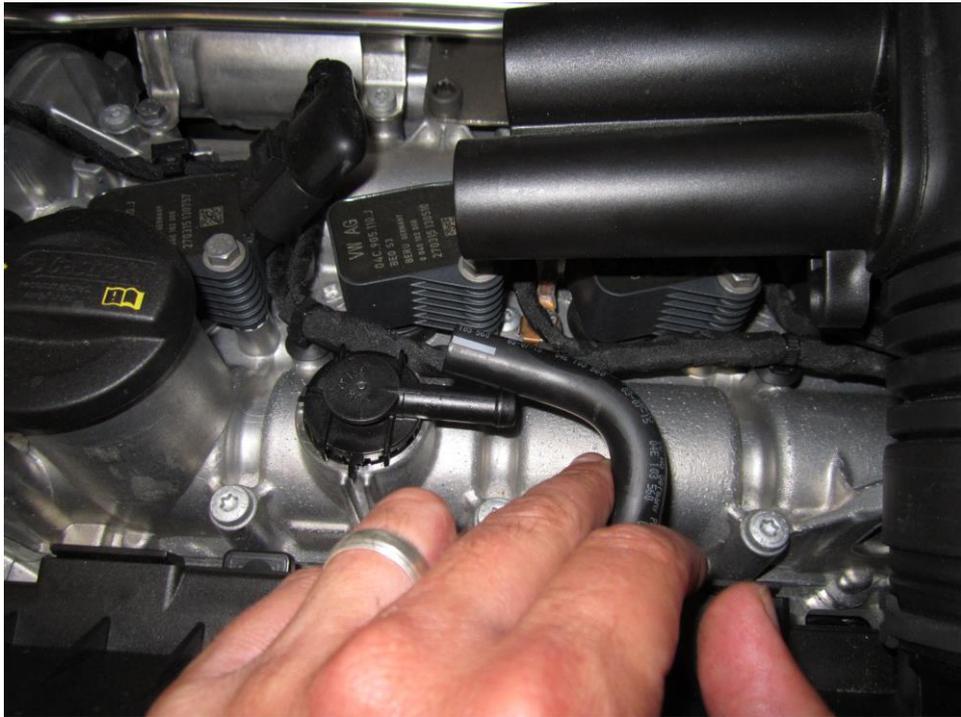

4. Now by pulling upwards in a sharp movement remove the airbox .
5. Fit the Forge Motorsport air filter to your new high flow silicon induction pipe, and tighten the hose clamp with your hose clamp driver.



6. Fit the new silicon inlet hose into position and connect the breather pipe to the rocker cover, then tighten the hose clamp.

TAKE CARE TO NOT OVERTIGHTEN THE HOSE CLAMP AS YOU COULD CRACK THE PLASTIC.



7. You can now tighten the final hose clamp that connects your silicon hose to the plastic turbo inlet hose. **AGAIN TAKE CARE TO NOT OVERTIGHTEN THE HOSE CLAMP AS YOU COULD CRACK THE PLASTIC.**



8.The vehicle is now ready for a test drive. Hope you enjoy the new found performance !

Please check out our other great performance parts made for this vehicle.

Check out WWW.FORGEMOTORSPORT.CO.UK and
WWW.FORGEMOTORSPORT.COM

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.com



ENGINEERED FOR PERFORMANCE