





## MERCEDES A45 AMG – 2 BOLT UNDERBODY BRACE. INSTALLATION INSTRUCTIONS.

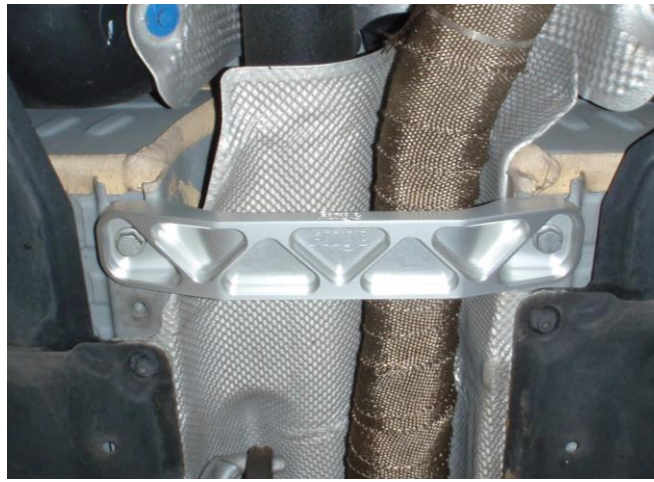

### Tools required:


- Vehicle ramp or jack and suitable axle stands.
- 16mm Socket, suitable ratchet.
- Safety eyewear, footwear, gloves and protective clothing are also recommended.

1. To avoid injury allow the vehicle to cool down fully before starting this installation.
2. Raise the vehicle on a ramp or using a jack and support with suitable axle stands.
3. Using a 13mm socket and suitable ratchet undo the 2x bolts and remove the OEM brace.

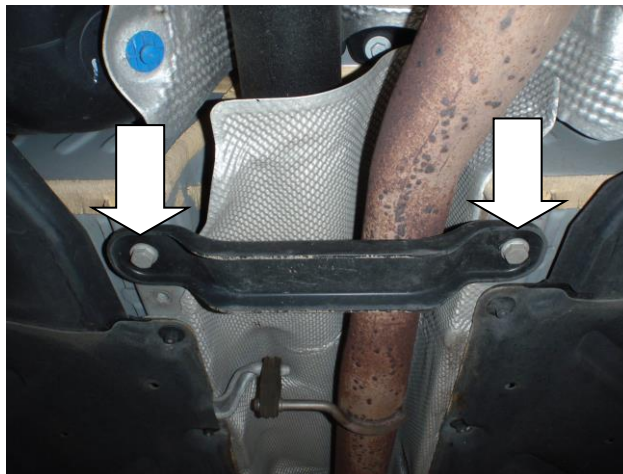

Engineered for performance

4. Secure the Forge billet Aluminium brace in position using the OEM Bolts. Carefully tighten to 45NM.

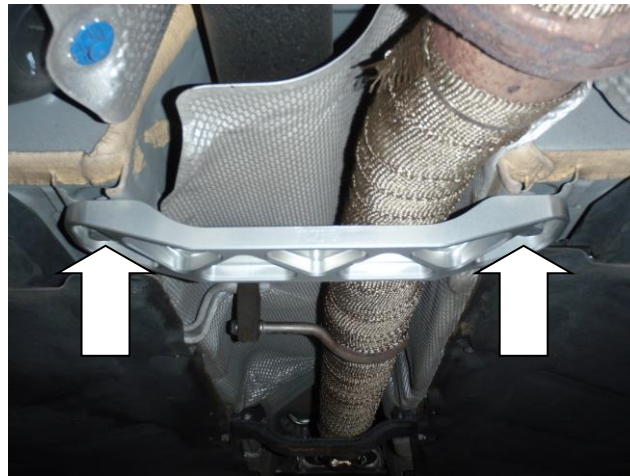

5. Your installation is now complete.

Check out [WWW.FORGEMOTORSPORT.CO.UK](http://WWW.FORGEMOTORSPORT.CO.UK) and [WWW.FORGEMOTORSPORT.COM](http://WWW.FORGEMOTORSPORT.COM)

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK – (+44)1 452 380 999 / [info@forgemotorsport.co.uk](mailto:info@forgemotorsport.co.uk)

Forge Motorsport US – (407)-447-5363 / [sales@forgemotorsport.com](mailto:sales@forgemotorsport.com)



**Engineered for performance**