


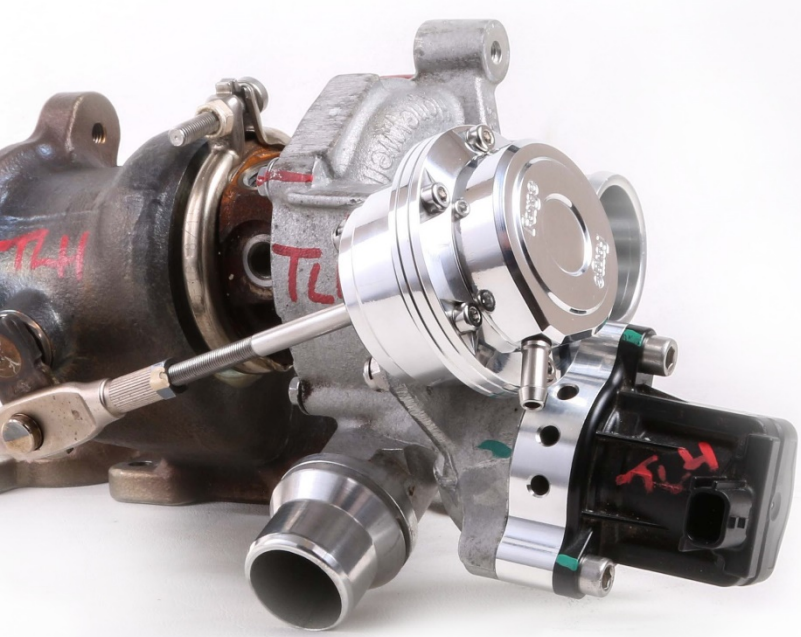

FMSPRN12 INSTALLATION INSTRUCTIONS



1. Locate the solenoid valve which will be fitted directly to the turbo (Fig 1) or on the boost pipe (Fig 2)



2. Remove the solenoid valve by undoing the 3 bolts using either a 4mm Allen key or T30 Torx driver.

3. Check that both rubber O-rings are in the grooves of the Forge adapter (Fig 3). Insert the Forge adapter where the solenoid valve was located and insert the solenoid valve into the Forge adapter.



4. Ensure all holes are in alignment and fit using the 3 new bolts provided.
5. The installation is now complete.

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK - (+44)1 452 380 999 / info@forgemotorsport.co.uk <http://www.forgemotorsport.co.uk>

Forge Motorsport US - (407)-447-5363 / sales@forgemotorsport.co.uk <http://www.forgemotorsport.com>

Forge Motorsport Asia – (+886)-4-22516887 / sales@forgemotorsport.asia <http://www.forgemotorsport.asia>



Engineered for performance