


AUDI A4 (B9) 2.0 TSI TRANSMISSION BUSH INSERT INSTALLATION INSTRUCTIONS.




Tools required:

- Vehicle ramp or jack and suitable axle stands.
- 10mm Multi-spline driver, extension bar and suitable ratchet.
- Copper grease.
- Safety eyewear, footwear, gloves and protective clothing are also recommended.
- 1. To avoid injury allow the vehicle to cool down fully before starting this installation.
- 2. Raise the vehicle on a ramp or using a jack and support with suitable axle stands.
- 3. Using a 10mm Multi-spline driver, extension bar and suitable ratchet undo the 2x bolts on the OEM bush support (Labelled A in the illustration below) and remove the support bar.

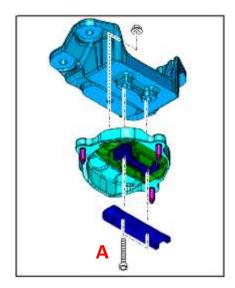

- 4. Apply copper grease to the areas shown. The insert is a contact fit with the surrounding rubber bush.
- 5. Push the insert home until it sits up against the metal part of the transmission mount bush.

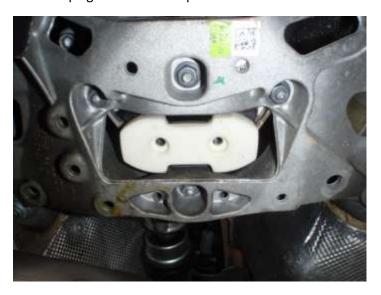

- 6. Refit 2x OEM bolts, torque to 20 NM +90 Degrees.
- 7. Your installation is now complete. Enjoy Your New Performance!

Check out <u>WWW.FORGEMOTORSPORT.CO.UK</u> and <u>WWW.FORGEMOTORSPORT.COM</u>

For a full range of performance products for your vehicle.

As always, with any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/ Installer, or you may contact us directly.

Forge Motorsport UK - (+44)1 452 380 999 / info@forgemotorsport.co.uk

Forge Motorsport US – (407)-447-5363 / sales@forgemotorsport.co



Engineered for performance