



Jack the vehicle up and remove the wheel and locate the two bolts attaching the disk to the hub.

Remove both bolts with using a 12mm spanner. These are not used when fitting our wheel spacers.

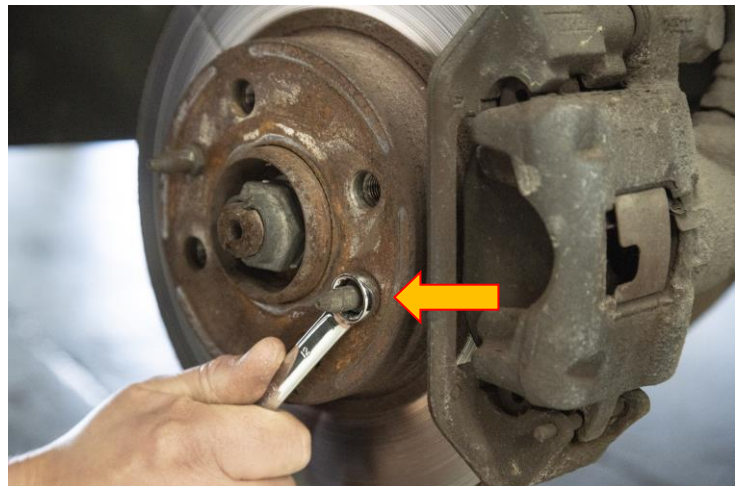

Give the mounting surface and centre bore of the disk a clean with a wire brush before fitting the Forge Motorsport spacers.

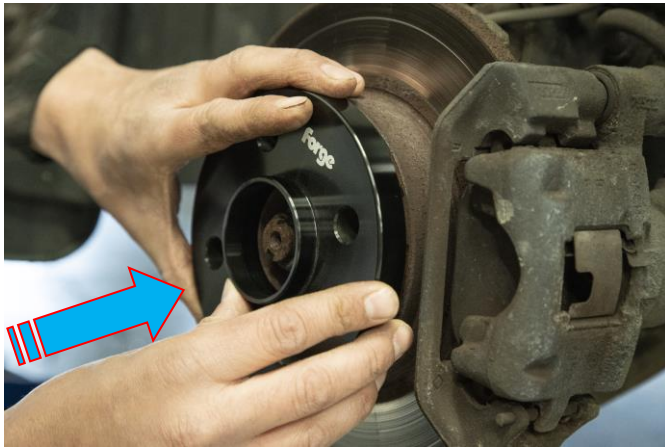

Place the new spacer onto the disk, line up the holes for the wheel bolts.



Fit the wheel and torque the wheel bolts to the required setting and follow these steps for the remaining spacers.

That is the Installation of FMWS58116 complete, take the vehicle for a test drive and enjoy your new Forge Motorsport product.

**Check out [WWW.FORGEMOTORSPORT.CO.UK](http://WWW.FORGEMOTORSPORT.CO.UK) and [WWW.FORGEMOTORSPORT.COM](http://WWW.FORGEMOTORSPORT.COM)**  
**For a full range of performance products for your vehicle.**

If you have any questions or concerns about this product or anything else, please feel free to contact your local or preferred Forge Motorsport Dealer/Installer or you may contact us directly.

**Forge Motorsport UK** (+44)1452 380999  
**Forge Motorsport USA** (407)-447-5363  
**Forge Motorsport ASIA** +886-4-22516887

[info@forgemotorsport.co.uk](mailto:info@forgemotorsport.co.uk)  
[sales@forgemotorsport.com](mailto:sales@forgemotorsport.com)  
[sales@forgemotorsport.asia](mailto:sales@forgemotorsport.asia)



**Forge Motorsport**



**@forgemotorsport**



**@forgemotorsport**



**Forge Motorsport**